

Important note

Please be advised that the “**Online Configuration Mode**” button in the Java tool now has a pre-requisite before it can be activated starting with firmware from **10-31-2016** and **11-16-2016**. Please follow these steps to allow the “Online Configuration Mode” to operate correctly.

Through the Modular Switch (ACX048, ACX080, ACX160, ACX288)

1. Connect a monitor, keyboard, and mouse to the CPU board and press **L-Shift, L-Shift, O**
2. Once in the menu, go to “**Configuration**” and login as **admin:admin**
3. Go to **System>>Online Config** (*its located later in the list*), and set “**Online Config**” to “**Y**” by using the **SPACE key**
4. Apply the settings, and press **ESC** to go back to the main menu
5. On the main menu, click on “**Save**” to save the settings to your config
6. If you are already connected using the Java tool, you will need to disconnect and reconnect for the settings to take affect

Through the Receiver / Compact Switches / Modular Switches

1. Connect a monitor, keyboard, and mouse to the Receiver and press **L-Shift, L-Shift, O** to bring up the OSD
2. Once in the menu, Press **ESC** once to go to the main menu and go to “**Configuration**” and login as **admin:admin**
3. Go to **System>>Online Config** (*its located later in the list*), and set “**Online Config**” to “**Y**” by using the **SPACE key**
4. Apply the settings, and press **ESC** to go back to the main menu
5. On the main menu, click on “**Save**” to save the settings to your config
6. If you are already connected using the Java tool, you will need to disconnect and reconnect for the settings to take affect