

OCTOBER 2000

525056	525067	525076	525097	39964
525057	525068	525077	525098	39965
525058	525069	525078	525099	39966
525059	525070	525079	525100	39967
525060	525071	525080	525101	39970
525061	525072	525081	536000	RM399
525062	525073	525094	536001	RM400
525063	525074	525095	536002	RM403
525066	525075	525096	536003	RM404
				40169

Addendum **Elite Series Data Cabinets**

This addendum contains important changes to your Elite Series Data Cabinets. Please keep this addendum with that manual for easy reference.

The last version of your manual did not contain instructions for installing the Elite Series Sliding Server Shelf (RM400). Included are the appropriate installation instructions.

Installing the Elite Series Sliding Server Shelf (RM400)

What's Included

- (4) Mounting brackets
- (1) Shelf assembly
- (8) #10-32 screws
- (12) Wing nuts

Installation

- 1) Remove the shelf tray from the assembly by holding the cable support bar and pulling the shelf out. There is a slide release tab on each slide. Push the tabs in and pull the shelf tray off the rest of the assembly.
- 2) Mount the server fins on the shelf tray. The studs on the bottom of the fins should be placed in the long slots on the top of the shelf tray and then wing nuts are used to secure them underneath the shelf tray. Four fins can be used if there are two servers or just two fins can be used if there is one large server.
- 3) Mount the remaining part of the shelf assembly to the mounting rails (at the desired height) using two 10-32 screws per bracket. Do not tighten the screws.
- 4) Slide the shelf tray back onto the mounted portion of the assembly so that the slide locks together. Tighten the screws on the mounting brackets once the shelf tray is secured back on the assembly.
- 5) Attach the cable bridges to the rear slot on the shelf tray using two wing nuts and two lock washers per bridge.

