

# ACX300FIA - OSD

## Menu Options RS232 VGA Sound

U = Update Flash FW  
M = USB Memory Option  
L = Lock Menu disabled  
I = Monitor sync disabled  
O = DDC Opt remote monitor  
V = VGA parameter  
Q = Exit

FW Version Rem = 1183 Loc= 1183

## DDC Options (0)

0 = remote monitor  
1 = local monitor  
2 = fix actual DDC  
4 = KVM-TEC fixed 1024x768  
5 = KVM-TEC fixed 1280x1024  
6 = KVM-TEC fixed 1680x1050  
7 = KVM-TEC fixed 1920x1080  
8 = KVM-TEC fixed 1920x1200

Shift	up	F1	F4	down	36
Shift	<-	F2	F3	->	146
Zoom	out	F5	F6	in	2080
Pixelfine	-	F7	F8	+	0

Space = 1/10 steps  
M = Video Mode Auto  
K = Automatic seek  
I = Init VGA Table  
S = Save - exit  
Q = Quit - no save