 






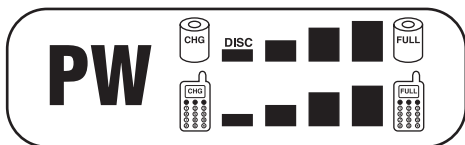

Nextel i1000 Dual Desktop Charger

Operating Instructions

LCD Display

1. The entire graph displays when power is first connected.

 
 


2. The front slot is used to charge the phone and the  icon will flash during charging. When the phone is fully charged, the  icon will light.
3. The rear slot is used to charge the battery. The  icon will flash during charging, and the graph will show the charging ratio. When the battery is fully charged, the  icon will light.
4. To eliminate memory effect, press the discharge button to discharge a Ni-MH or Ni-Cad battery after it has been charged several times. The  icon will flash and the graph will flash the  icon during discharging. The Charger will automatically switch to charge condition after the battery is fully discharged.

NOTE: You don't have to discharge a Li-ION battery.

5. PW, a power indicator, will stay lit as long as the power is on.
6. The Dual Desktop Charger will simultaneously charge both front and rear slots.
7. The Dual Desktop Charger can charge Ni-MH, Ni-Cad, and Li-ION batteries.
8. The Charger features over-charging and short-circuit protection.
9. Accessories include an instruction menu and a power adapter.
10. The AC input is 110/220/230/240 V.

WARNINGS

1. Please make sure that your power source AC and DC matches the specification listed above.
2. Keep the charger away from water and damp areas to reduce the risk of shock.
3. Do not open the charger.
4. Disconnect the power if either of the graphs are flashing:
 or .
5. Disconnect the power adapter when you're not using it.

What to do if...

There's no display after the unit is plugged into a power source.

1. Check the power adapter. Is it connected properly?
2. Make sure you're using our attached adapter to avoid incompatibility.
3. Call Black Box Technical Support at 724-746-5500.

There's no display after the phone is inserted into the front slot.

 
Some cellular phones are programmed to start charging after a few minutes. Please wait.

No charging ratio is displayed after the phone is inserted into the front slot.

Most phones are designed to show a charging ratio on the phone's display. The Dual Desktop Charger works according to its original design. As long as the phone icon is flashing, your phone is correctly charging.

There are abnormal flashes on the display.

Check the battery. Is it an old battery? Battery performance will decline after use. Replace the battery.

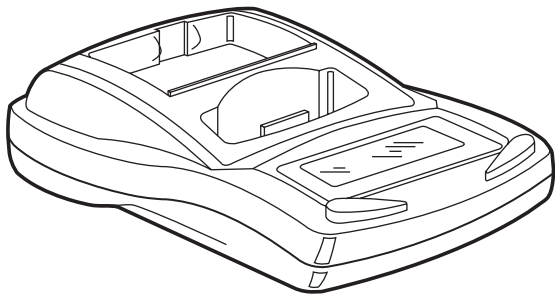

Nextel i1000 Dual Desktop Charger