


© Copyright 1998. Black Box Corporation. All rights reserved.

1000 Park Drive • Lawrence, PA 15055-1018 • 724-746-5500 • Fax 724-746-0746



JANUARY 1998 IC088A IC089A

# **Coax Splitters**

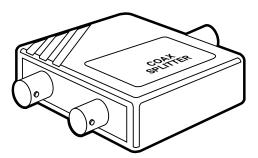

### CUSTOMER SUPPORT INFORMATION

Order toll-free in the U.S. 24 hours, 7 A.M. Monday to midnight Friday: 877-877-BBOX FREE technical support, 24 hours a day, 7 days a week: Call 724-746-5500 or fax 724-746-0746 Mail order: Black Box Corporation, 1000 Park Drive, Lawrence, PA 15055-1018 Web site: www.blackbox.com • E-mail: info@blackbox.com

#### TRADEMARKS USED IN THIS MANUAL

#### IBM is a registered trademark of IBM Corporation.

All applied-for and registered trademarks are the property of their respective owners.

#### **COAX SPLITTERS**

## 1. Specifications

Protocol —

Range —

IBM Control Units Supported —

Terminal Multiplexors Supported —

IBM Terminals Supported —

Interfaces —

IBM<sup>®</sup> 3270, 2.358 Mbps

4000 feet (1219 m), terminals to control unit

IBM 3274, all types

IBM 3299, Lannet LM-299

IBM 3270 Category A displays and printers

IC088A: (2) BNC male connectors (subchannels), (1) BNC female connector (main channel); IC089A: (3) BNC female connectors

Enclosure —

Operating Temperature — Plastic

32 to 104°F (0 to 40°C)

<b>Relative Humidity</b>	
Tolerance —	

Power —

Size —

Weight ----

10 to 95%, noncondensing

Operates without AC power

0.9"H x 2"W x 2.75"D (2.3 x 5.1 x 7 cm)

3.2 oz. (907 g)

## 2. Introduction

### 2.1 Description

The Coax Splitter is a 2-port coax multiplexor that enables two IBM 3270 terminals to connect to one IBM 3274 with a single coax cable. The two terminals operate simultaneously without any reduction in performance or increase in response time.

The Splitter is compact and lightweight, and it operates without AC power. Installation is easy, and the Splitter operates for years without attention or maintenance.

The Coax Splitter operates with all types of IBM 3274 control units and with the IBM 3299 terminal multiplexor. The two multiplexed ports must come off a single control unit (that is, the Splitter cannot multiplex data from two control units).

The Splitter is available in two models, which are compatible with each other. The IC088A has a female BNC connector for the main channel. The two subchannels have male BNC connectors for direct mounting onto two adjacent coax ports of one IBM 3274 control unit. The IC089A has three female BNC connectors.

### 2.2 Features

- Enables two IBM 3270 terminals to share a single coax cable.
- Supports existing host software and 3274 customization.
- Direct connection to the IBM 3274 Control Unit ports.
- Range up to 4000 feet (1219 m).
- No AC power required.
- Easy installation.

## 3. Installation

The Coax Splitter operates in pairs. One Coax Splitter is connected directly to two ports of one IBM 3274 Control Unit (or of one IBM 3299 Terminal Multiplexor). At the remote end, the other Coax Splitter is connected to the two terminals (displays or printers). Note that all models are interchangeable.

A single coax cable connects between the two main ports of the Coax Splitters, up to 4000 feet (1219 m) apart.