

## Quick installation guide for LB9217A and LB9220C-SC

This installation guide gives step-by-step instructions on how to install LB9217A & LB9220C-SC that pertains to this 17-port modular Ethernet switch.

## Selecting a module combination with LB9217A and LB9220C-SC

LB9217A can be plugged in with the combination of different copper and fiber optic connectors. Following is a list of various modules pertains to this 17-port modulated Ethernet switch.

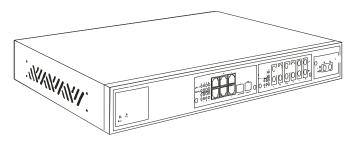


Figure	1. Front	Panel	of the	Chassis	LB9217A.

Modules: Ports
LB9213A: 8TX
LB9219A: 4TX + 4FX (SC)
LB9216A: 6TX + 2FX (ST)
LB9218A: 6TX + 2FX (SC)
LB9214A: 8FX (ST)
LB9215A: 8FX (SC)
LB9220C-ST: 1FX (ST)
LB9220C-SC (SC)

## Follow These Steps for Installation:

- **Step 1**: Turn off the power before installation.
- **Step 2**: Unscrew the cover plates of the module slots. Retain both the screws and the cover plates. The plates can be reinstalled if the module is removed.
- Step 3: Remove the module from the static-free container then slowly slide the plug-In module into the designated slot, following the plastic guides.
- Step 4: Snap in the Plug-In Module to attain a firm connection.
- **Step 5**: Tighten the screws retained from original cover plate.
- Step 8: Restore power.





Figure 2: Removal of cover plate

Fiber module being installed

Final Installation: Selecting a Site for LB9217A, then connecting to Power, then connecting to the network with the selected Cable.

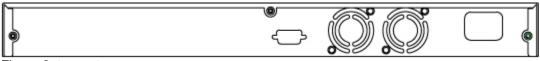


Figure 3: Internal power: Connect the supplied AC power cord to the receptacle on the back of the switch, and then plug it into a standard AC outlet with a voltage range from 100 to 240 Vac.