

Installation

This installation guide gives step-by-step instructions about how to install the LB9220C-ST or LB9220C-SC Module

Selecting a combination for the plug-in module of LB9220C-ST or LB9220C-SC

Fiber Plug-In Modules are available for Mulit-mode with ST, SC, MT-RJ or VF-45 connectors and Single-mode with SC connectors. Certain modules are a combination of FX and TX ports, which accommodate either FX with ST, SC, MT-RJ or VF-45 connectors or TX with RJ-45 connectors.

Follow These Steps for Installation:

- Step 1: Turn off the power before installation. Push the ON/OFF rocker switch to the 0 (0FF) position.
- **Step 2**: Locate the module cover plate. It is located in the front of most models.
- Step 3: Unscrew the plate and carefully remove it from the switch. A dummy module may be attached to the cover plate.
- Step 4: Retain both the screws and the cover plate. The plate must be reinstalled if the module is removed.
- **Step 5**: Slowly slide the Plug-In Module into the port, following the plastic guides.
- **Step 6**: Snap in the Plug-In Module to attain a firm connection.
- **Step 7**: Tighten the screws retained from original cover plate.
- Step 8: Restore power.